


HTFS-15 PICNIC TABLE

(HANDICAP TABLE FRAME SQUARE)

- (1) PLACE TABLE TOP UP-SIDE-DOWN ON GROUND.
- (2) POSITION ONE TABLE FRAME ON TABLE TOP, ALLOWING 6" OVERHANG TO THE END OF THE TOP. SQUARE THE FRAME TO THE TABLE TOP AND ATTACH WITH BOLT CLIP ASSEMBLIES AS SHOWN.
- (3) POSITION THE OTHER TABLE FRAMES ON TABLE TOP ALLOWING FOR A 6'-0" DISTANCE, MEASURING FROM CENTER TO CENTER OF THE FRAMES. THE TABLE TOP OVERHANG FROM THE LAST FRAME WILL BE APPROXIMATELY 2'-6".
- (4) SQUARE FRAMES TO THE TABLE TOP, ATTACH WITH BOLT CLIP ASSEMBLIES AND TIGHTEN.
- (5) ATTACH FIRST DIAGONAL BRACE TO FRAME AS SHOWN WITH 7/16" x 3" MACHINE BOLT.
- (6) ATTACH OTHER END OF DIAGONAL BRACE TO TABLE TOP WITH BOLT CLIP ASSEMBLIES AND TIGHTEN.
- (7) REPEAT FOR OTHER DIAGONAL BRACES.
- (8) TURN TABLE RIGHT-SIDE-UP. POSITION SEAT PLANK, ALIGN WITH THE SHORTER OVERHANG END OF THE TABLE TOP, ALLOWING FOR 6" SEAT PLANK OVERHANG.
- (9) ATTACH SEAT PLANK WITH BOLT CLIP ASSEMBLIES AND TIGHTEN.

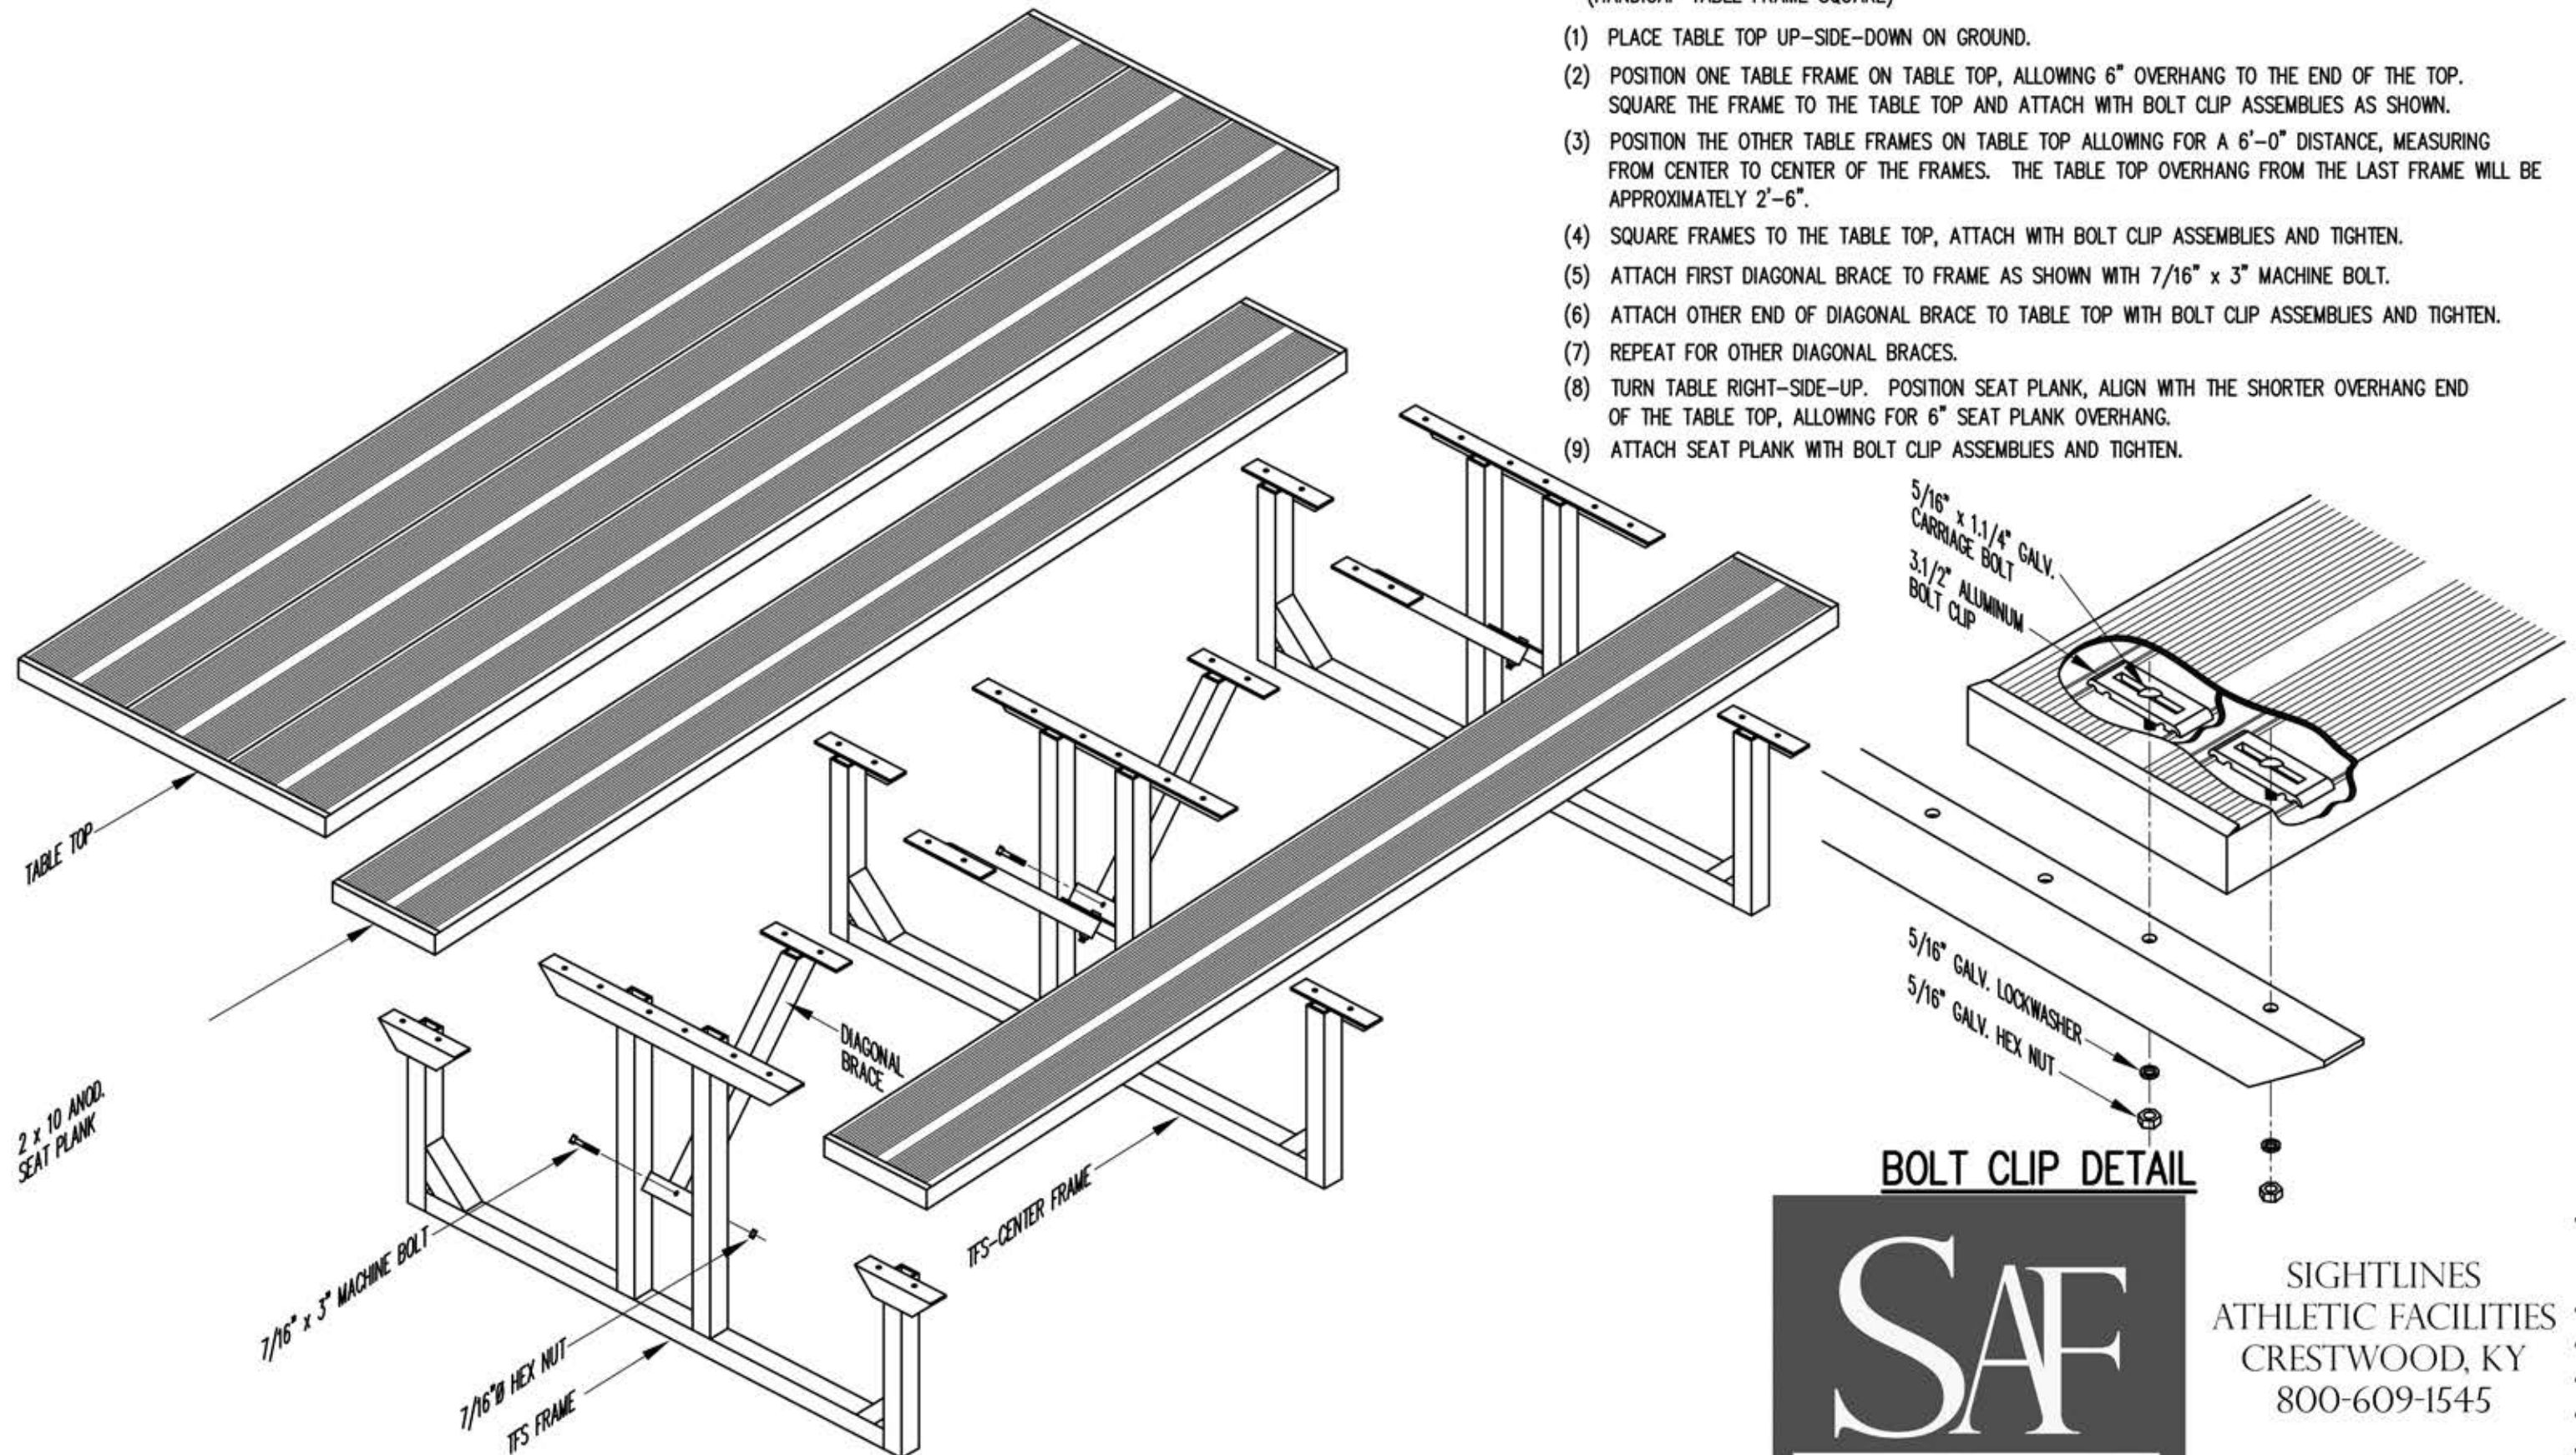

BOLT CLIP DETAIL

SAF

SIGHTLINES
ATHLETIC FACILITIES
CRESTWOOD, KY
800-609-1545